


## RESTORING A CHIPPED SURFACE - (cod. KIT01RS)



**1.** Chipped area

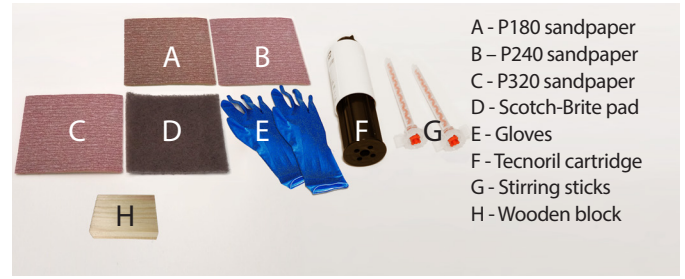

**2.** Restore kit content



**3.** Widen the chipped area with the wooden block (H) and P180 sandpaper (A) in order to smooth the surface and remove all small cuts. Polish the surface next to the damaged area with 320-grit sandpaper (C).




**4.** Remove dust and clean the surface with acetone or alcohol.




**5.** Remove the cartridge cap (F), cut its top, and introduce the stirring stick (G). Load a silicone gun with the cartridge and take care to discard the first 10 cm of product.



**6.** Cover the area to be repaired with a plentiful layer of product. Let it dry for 2 hours at a minimum temperature of 15/18°C. Do not wet the surface.

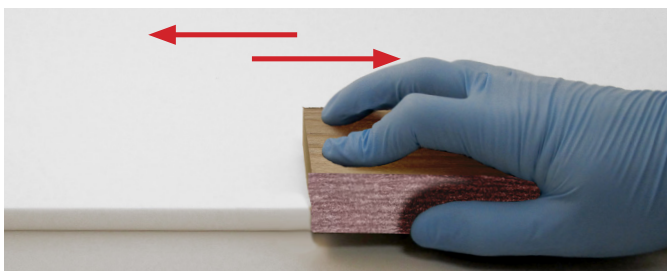

**7.** Sand the excess with the wooden block (H) and smooth the surface with P180 sandpaper (A). Continue polishing the surface with the wooden block and the P240 sandpaper (B).

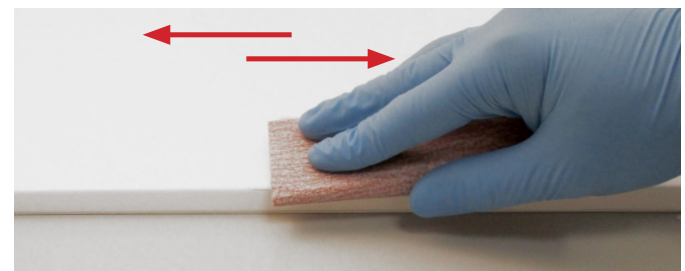

**8.** Sand the surface with P320 sandpaper (C) following the direction shown above to even the surface.



**9.** Wipe a Scotch-Brite pad (D) in the direction shown above until the surface is completely smooth.



**10.** Restored surface. Some traces might be visible.